


○—Drill Hole ONLY - DO NOT Print Lines or These Words

hifold[®]

the fit-and-fold booster™

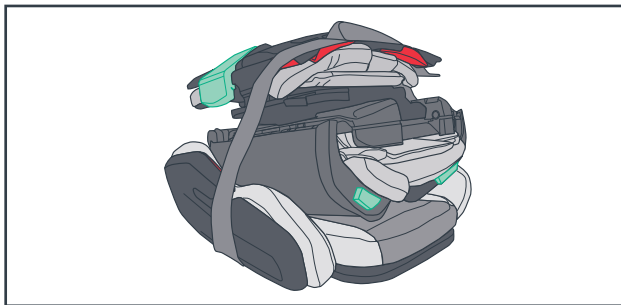

For Children 15 to 45kg

This hifold booster seat is for use from 15 to 45kg (33 to 100lbs.).

The hifold is approved to UN ECE R44/04 as a Group 2-3 booster seat with a weight range of 15 to 36kg.

The hifold has been successfully tested for use by children weighing 45kg (100lbs.) or less.

USA: Approved to FMVSS 213

This child restraint conforms to all applicable Federal motor vehicle safety standards for use in motor vehicles.

ECE.R44/04
UNIVERSAL
15-36kg
Group 2 - 3

E8

048643



Model Number:

- HF02-EU

Important: Please Read this Manual!

KEEP THESE INSTRUCTIONS FOR FUTURE USE. Store under Seat Base Cover.

MUST be used with a 3-point vehicle lap and shoulder belt compliant with ECE R16 or equivalent standard in other countries.

Child restraint laws vary from country to country. Check your local laws as they may have specific use requirements.


Table of Contents

Instruction Manual Storage.....	1
Weight and Height Use Recommendations.....	1
hifold Booster Seat Parts.....	2
Warnings.....	3
Selecting a Vehicle Seating Location.....	4
Preparing for Use.....	5
Initial Setup.....	5
Adjusting the Size to Fit Your Child.....	6
Installation and Securing Your Child.....	7
Removing Your Child.....	9
Folding hifold Booster Seat.....	9
Additional Information.....	11
Removal and Cleaning of Seat Cover.....	11
Customer Service Information.....	13
Warranty.....	14
Patents.....	14
Instructions.....	15

Instruction Manual Storage

Instruction Manual Storage:

Store instruction manual under Seat Base Cover.

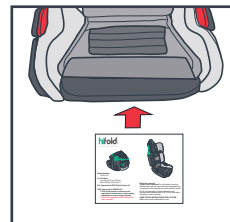

Instruction Manual


Weight and Height Use Recommendations

Use only with a child that has outgrown their car seat with a 5-point harness and can sit in the booster seat properly for the entire duration of each trip. If your child will not remain seated properly, your child should use a child restraint with 5-point harness.


“Outgrown” means the child’s weight or height exceeds the use limits for the car seat.

“Sitting properly” means the child must remain seated without slouching under lap belt, moving shoulder belt under arm or behind back, or leaning forward or sideways moving out of position so the vehicle belt remains properly positioned.

hifold Booster Seat Parts

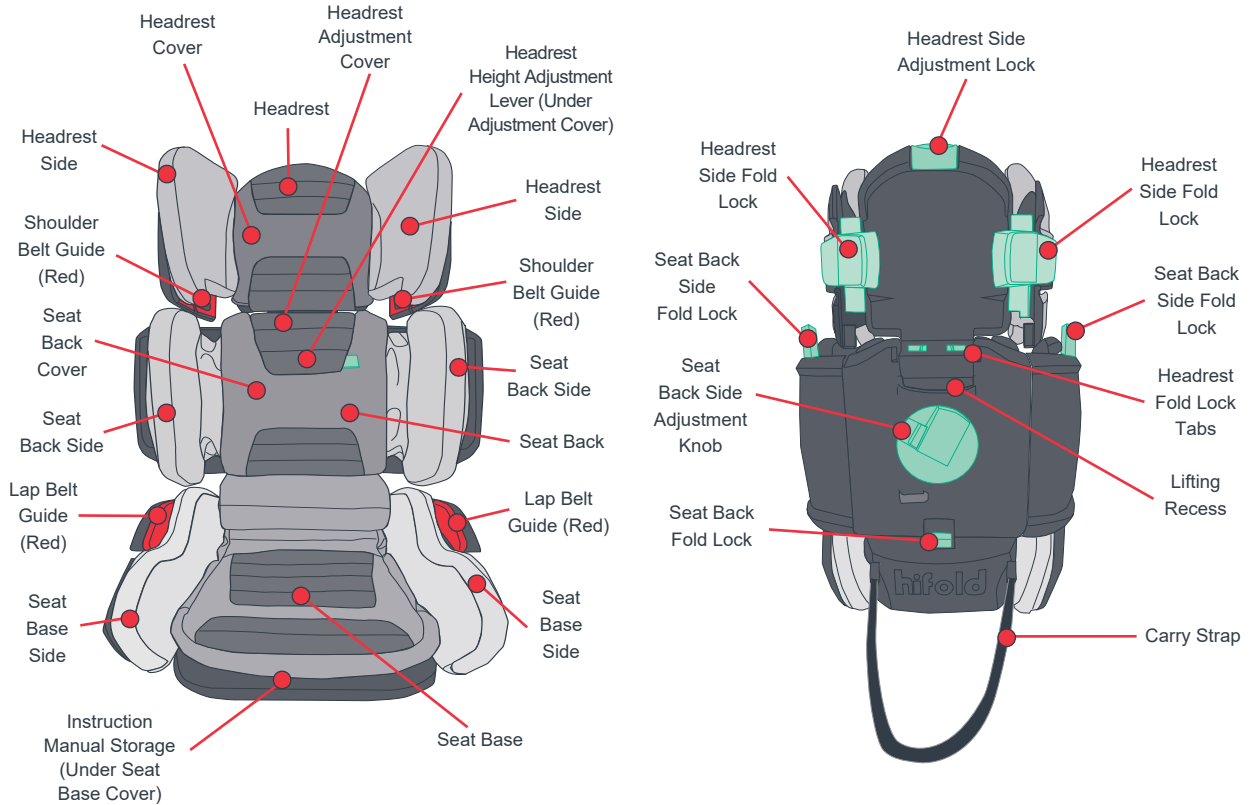

hifold Booster Seat Parts

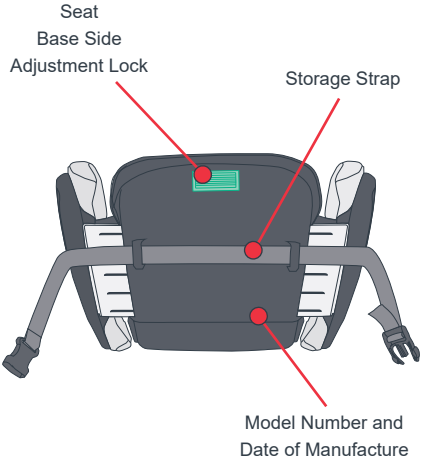

Cup Holder Accessory - included with some hifold models. See Cup Holder instruction sheet for use.


To purchase a Cup Holder Accessory, contact Carfoldio Customer Service. See Customer Service Contact Information section.



WARNING - DEATH or SERIOUS INJURY can occur

Failure to follow these user instructions and car seat labels can result in injury or death to your child.

- Snugly adjust the vehicle lap and shoulder belt around child, ensuring there are no twists or slack in the adult seat belt.
- Check the position of the hifold booster and vehicle belt to avoid them becoming trapped by a movable seat or in a door of the vehicle during everyday use.
- DO NOT allow any use of this booster seat after a crash where a child was secured in the booster seat.
- NEVER install the booster seat with a 2-point lap belt only or only the lap belt portion of a 3-point lap and shoulder belt.

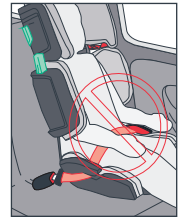






WARNING - DEATH or SERIOUS INJURY can occur

- Secure the booster seat even when not occupied and secure any loose objects or luggage. Unsecured items may injure other occupants in a crash.
- DO NOT modify this booster seat, modifications can result in a serious injury or death in a crash.
- NEVER leave the child unattended.
- Only use accessories and replacement parts approved by Carfoldio LTD. Do not use accessories or parts made by other manufacturers.
- Never use booster seat without seat covers. Seat covers are an integral part of the booster seat.
- If the seat cover becomes damaged during washing, then it must be replaced with a new cover supplied by the manufacturer.
- The booster seat and seat belt parts can become very hot if left in the sun and can burn the child. Cover the seat when left in the sun.
- NEVER use the hifold Booster Seat in a vehicle seating location with an active frontal air bag. If in doubt refer to vehicle manual.

Selecting a Vehicle Seating Location

Select a Seating Location To Use:

- Select a vehicle seating location that faces the direction of travel and has a 3-point Adult Lap and Shoulder Belt system.

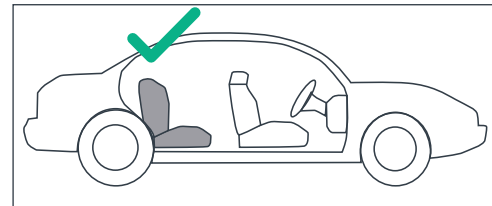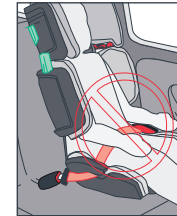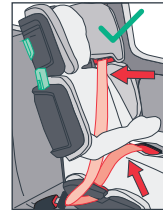

Preparing for Use

Initial Setup


In preparing the hifold for use with your child, you will need to adjust the height and width of the hifold to fit your child by following the steps in this section.

CAUTION: There are many folded and hinged elements. Please be careful when opening and closing to AVOID pinching or trapping.




1. Unfold the booster seat.


- a. Once released from the strap grab the top edge of the **①** headrest and lift upwards until the hifold backrest is erect and aligned.

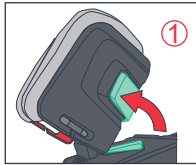


- b. As the headrest and backrest become vertical you should hear a click as they lock into place in the vertical position **②**.

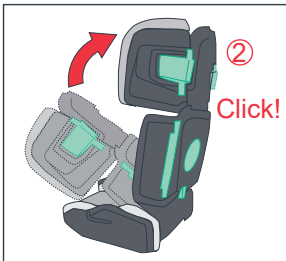


- c. Open the backrest side panels until you hear a click and they become stable and locked **③**.

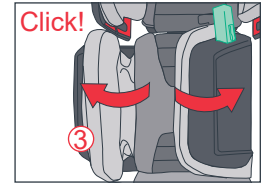

- d. On the backrest side panel the seat back fold locking button should project above the top of the side panel and be locked **④**.

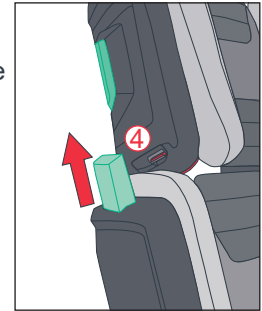


- e. Open the headrest side panels until you hear a click and they become stable and locked **⑤**.

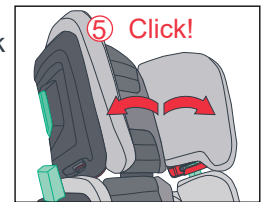


Adjusting the Size to Fit Your Child

2. Adjust the hifold Booster to the maximum height and maximum width as described below.


- a. **Seat Base Sides/Lap Belt Guides** - Adjust Seat Base/Lap Belt Guides to the maximum width by pulling Seat Base Side Lock ① on underside of Seat Base. Then adjust to be close but not touching the child's thighs ②.

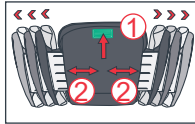



- b. **Seat Back Sides** - Adjust Seat Back Sides ① out to the maximum width by depressing the lock on the Seat Back Side Adjustment Knob ② and rotate knob counterclockwise to move Seat Back Sides out.

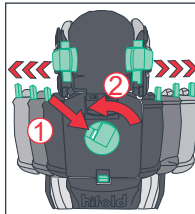

- c. **Headrest Sides** - Press the button at the top of the headrest ① and move the side panels outwards ②.

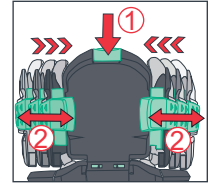


- d. **Headrest & Backrest Height** - Lift the fabric flap found in the center of the back rest just below the headrest ①. Grip the lever ②, rotate upwards. Raise or lower the backrest until the shoulder belt guide on the headrest is near the child's shoulder ③. Once at the right height, release the lever and lock the backrest in position.

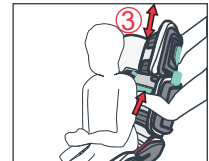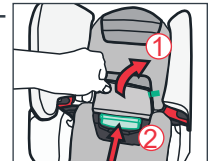


Installation and Securing Your Child


1. Sit child on the Booster Seat with child's lower and upper back in contact with the Seat Back, not slouching down on the Seat Base with lower torso forward of the Seat Back.

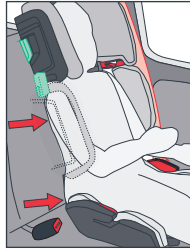

4. Adjust the width of the Headrest Sides so they are close to child's head. See instructions in "Preparing for Use" section.

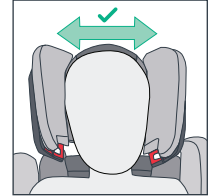


2. Adjust Seat Base/Lap Belt Guides into position next to child's thighs. See instructions in "Adjusting the size to fit your child" page 6.

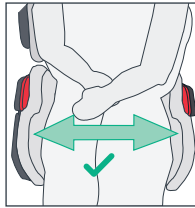


5. Secure child with the Vehicle Lap and Shoulder belt.

- a. Pull the vehicle lap and shoulder belt across front of child and connect to the seat belt buckle.

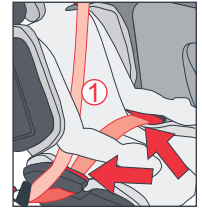


3. Adjust the width of the Seat Back Sides so they are close to child's shoulders. See instructions in "Preparing for Use" section.

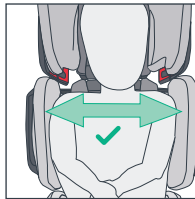

- b. Route vehicle lap belt through Lap Belt Guide in both Seat Base Sides ① and pull to remove slack from lap belt.


Installation and Securing Your Child

6. a. Place the vehicle shoulder belt over child's chest and into the Shoulder Belt Guide by sliding the entire belt rearward into the slot on the underside of the Headrest ② and then guide the edge up and over the red slot cover ③ so belt lays flat.

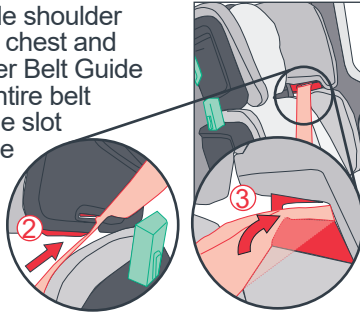


- b. Make sure the belts are not twisted.


7. Adjust the height of the Headrest to position the Shoulder Belt Guide just above the top of your child's shoulder ensuring the full width of the shoulder belt is on child's shoulder.

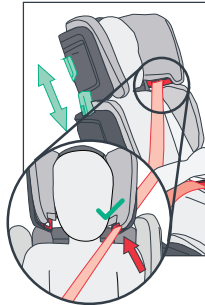


8. Pass the diagonal belt across the child's body and allow the diagonal belt to pass over the outside of the base side panel belt guide ①.

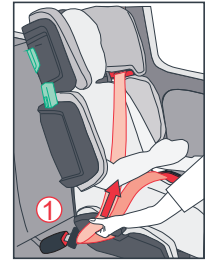

- Pass the lap section of the adult belt through the red lap belt guides on each side of the hifold ②.

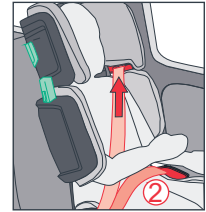

9. Check that vehicle lap belt is supported on pelvis such that the belt is low on hips and contacting thighs and that there is no slack or twists in the seat belt.

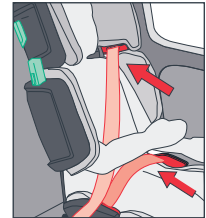

Removing Child

To Remove Child:

1. Unbuckle Adult Seat Belt.
2. Slide lap portion of the Belt out of the Lap Belt Guide in Seat Base Sides.
3. Remove the Adult Belt off the child.
4. Remove child from booster seat.


Folding the hifold Booster Seat

Transportation and Storage:

The hifold Booster Seat folds into a compact size for easy storage when not in use.


To store hifold Booster Seat:

1. **Adjust Headrest Sides** - Press Headrest Side Adjustment Lock ① down and adjust Headrest Sides ② into narrowest adjustment position.

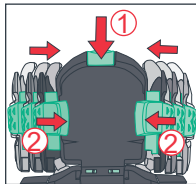


Folding the hifold Booster Seat


2. **Adjust Seat Back Sides** to the narrowest position ① ②.

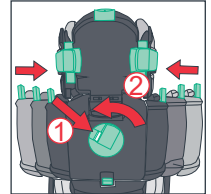


3. **Adjust Seat Base Sides** - Pull Seat Base Side Lock ① forward and slide Seat Base Sides to the widest position ②.

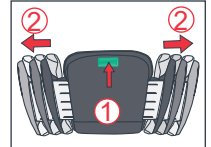


4. **Lower Seat Back height to the lowest position** - Lift the fabric flap found in the center of the back rest just below the headrest ①.

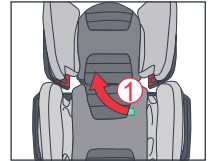

Grip the lever and rotate upwards ②.

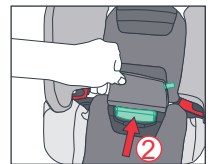


Lower seat back height to the lowest position ③.

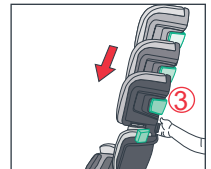



Folding the hifold Booster Seat

5. Fold Seat Back Sides -


Press button on Seat Back Fold Lock, ① push down on Fold Lock ② and rotate Seat Back Side inwards ③.

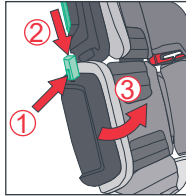


6. Fold Seat Back - forward by releasing the lock at the rear base of the backrest ①. If required adjust the base side panels outwards to improve folding compactly ②.

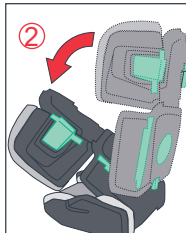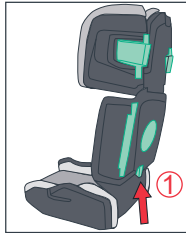


7. Fold Headrest - Pinch Headrest Tabs together ① and rotate Headrest backwards ②.

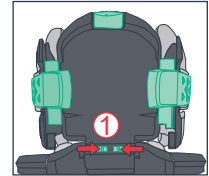

8. Fold Headrest Sides - Press Headrest Side Fold Lock ① and rotate inwards ②.

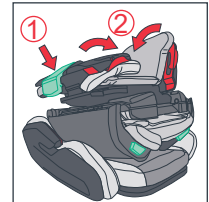

9. Wrap the strap around the folded hifold and secure.

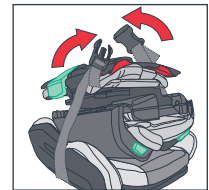

Additional Information

- **Aircraft Use - This restraint is not certified for use in aircraft.**



Removal and Cleaning of Seat Cover

Care and Cleaning:

Seat Covers (need to be removed prior to washing):

Fabric seat covers are machine washable in cold water, delicate or gentle cycle. No bleach. Line dry. Do not wring. Do not tumble dry. Do not iron.



Booster Seat Plastic and White Foam:

Plastic seat surfaces and white foam can be wiped down with a mild solution of soap and water. Wipe with clean water to remove soap.

Removal and Cleaning of Seat Cover



To remove seat covers for cleaning:

Note: The cover is made up of three sections, one headrest, one backrest and one base section. Each section includes the middle and two side sections.

Start from the headrest ① and backrest ② and base ③.




Removal of Headrest Cover:

- Remove Headrest Side covers first by starting at top rear corner and pulling Headrest Side Cover off top of the inner foam and then continue around the front and lower edge.
- Pull top center section of the top and free from the inner foam and then free at the lower edge. Reverse this process to refit.

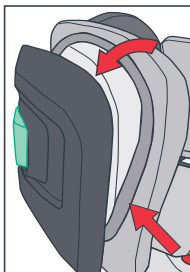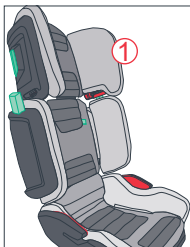

Removal of Seat Back Cover:




- Similar to the headrest cover, remove the side panel sections by peeling away from the inner foam. To release the central section pull forward and unhook elastic loops (4 on each side) from plastic seat back ②.
- Reverse this process to refit the cover.

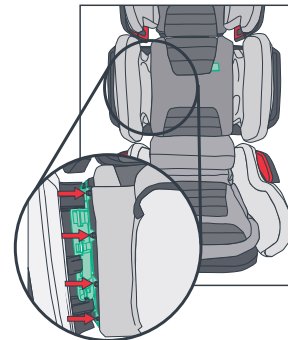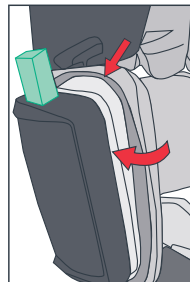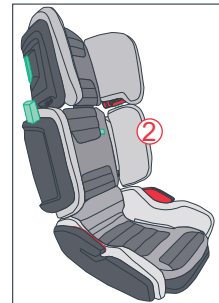

Removal and Cleaning of Seat Cover

Removal of Seat Base Cover:

- Remove Seat Base Side covers first by peeling the edge of the side section away from the inner foam.
- Continue to pull cover away and free from the foam.
- Pull Seat Base Cover off the front of Seat Base by starting at one side and pulling edge of cover out.
- Unhook loops attaching cover to seat base in the back and elastic loops on each side where the seat base meets the seat back.

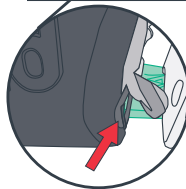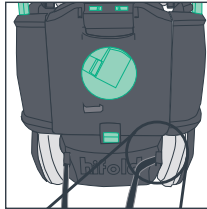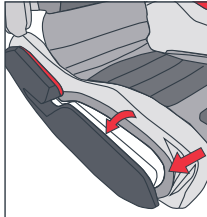

Customer Service Contact Information

Carfoldio Ltd.
Unit 2407, PO Box 6945,
London, W1A 6US, England, U.K.
Tel: 0800 4714984 (from within the U.K.)
Tel: +44 207 866 2385 (International)

You can also contact us in the following ways:

 support@mifold.com

 [@mifoldBooster](https://twitter.com/mifoldBooster)

 www.mifold.com/contact

 pinterest.com/mifold

 facebook.com/mifold

 instagram.com/mifold

Additional Information

Warranty:

At Carfoldio, we make innovative, high quality products for children. We warrant this product to be free from defects in material and workmanship existing at the time of manufacture for a period of one year from the date of initial purchase (sales receipt is required for proof of purchase). If such a defect is discovered during the limited warranty period, we will, at our sole option, repair or replace your product at no cost to you.

This limited warranty does not cover claims resulting from misuse, failure to follow the instructions on installation, maintenance and use, abuse, alteration, involvement in an accident and normal wear and tear.

This limited warranty is exclusive and in lieu of any other warranty, written or oral, including but not limited to any express warranty of merchantability or fitness for a particular purpose. The duration of any implied warranties, including any implied warranty of merchantability or fitness for a particular purpose, is expressly limited to this limited warranty period.

Some states and other countries do not allow limitations on how long an implied warranty lasts; therefore, the above limitations and exclusions may not apply to you.

For warranty service:

EU and other countries:

e-mail: support@mifold.com
Tel: 0800 4714984 (from within the U.K.)
Tel: +44 207 866 2385 (International)
or write to: Carfoldio Ltd.
Unit 2407, PO Box 6945,
London, W1A 6US, England, U.K.

Patents


This innovative product is protected by various patents and design registrations.

IL.....230153
US.....9,376,088 (B2)
EP.....2855214 (B1)
KR.....101626285 (B1)
RU.....201850188
CN.....104640748 (B)
ZA.....201409040 (B)
CA.....2874810 (C)
ES.....2646918 (T3)
JP.....6388132 (B2)
IN.....2967KON2014 (A)

Other patents pending.

KEEP INSTRUCTIONS FOR FUTURE USE.

Store instruction manual under Seat Bottom Cover.

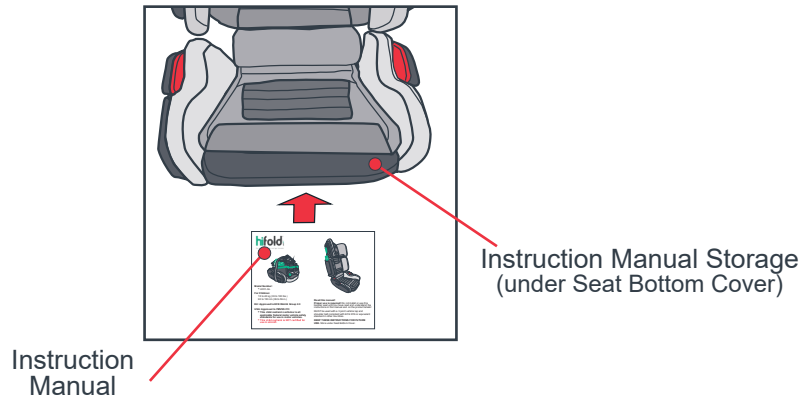

Carfoldio™ and hifold®
are registered trademarks
of Carfoldio Ltd.

Manufactured and distributed By:
Carfoldio Ltd.

www.mifold.com

Made in China
© 2019 Carfoldio Ltd.

1428 Rev D